

Trouble shooting with Error codes

Electronics continuously runs a self check. If it finds an irregularity, the electronic console will display an error code and stop normal operation for safety.

MI080/100/150

| Error Code | Trouble shooting |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Er1 | Speed sensor error 1) Please check if there is anything stuck inside. 2) Please check if the speed sensor is loose or defective. 3) Please contact after service center. |
| Er2 | Motor connection error 1) Please check the cables connected to motor are loose or not. 2) Please contact after service center. |
| Er3 | PC controller and motor controller connection error 1) Please check all cables connected to console and motor controller (MCB) are loose or damaged. 2) Please contact after service center. |
| Er4 | Controller protection error Please contact after service center. |
| Er5 | Motor protection error Please contact service center. |
| Er6 | Motor controller (MCB) protection error Please contact service center. |
| Er7 | Incline error (only for MI150) Please contact after service center.. |
| Er8 | HRC program error (only for MI150) 1) Please make sure the user grips on both hand pulse grips or wear chest strap. (Chest strap is optional function.) 2) Please check if hand pulse cables are loose. 3) Please contact service center. |

Please take off safety key and turn off the power switch. Try again to turn on power switch to see if the error goes away.

If there is still any error, please contact retailer store for service.