

MAINTENANCE

General Cleaning

1. Before proceeding, ensure that the treadmill power is off and that is unplugged from the electrical outlet.
2. To remove dust, use a small vacuum nozzle to carefully vacuum around all visible components.
3. To remove film or dirt use a slightly damp rag with a mild cleaning agent sprayed onto the rag only.
4. Be careful not to immerse any treadmill component with any liquids.



Cleaning and inspecting the running belt

Turn off the power and unplug from electrical outlet. Carefully position the treadmill on its side. Use a damp cloth to wipe off the inside of the running belt. Carefully rotate the running belt by hand to clean the entire inside face. Return treadmill to its upright position. If running belt edges are frayed, check the running belt alignment. If seams are splitting, call your retailer or nearest authorized service center.

Aligning the Running Belt

Ensure the running belt is centered on your treadmill at all times. Running style and a non-level surface are two instances that may cause the belt to drift off center. Minor adjustments to the two bolts at the rear of the treadmill are necessary when the belt has drifted off center.

1. Press "START" to begin running belt, then increase the treadmill's speed to 5 Km/hr (3 M/hr).
2. Stand at the rear of the treadmill to determine which direction the belt is drifting.
3. If the belt drifts to the left, turn the left adjustment bolt with wrench # 6 one-quarter of a turn clockwise. (See FIG.C)
4. If the belt drifts to the right, turn the right adjustment bolt with wrench # 6 one-quarter of a turn clockwise. (See FIG.D)
5. Observe the tracking of the belt for about 30 seconds. Repeat step 3, 4 and 5 as needed.

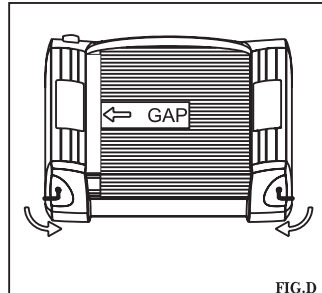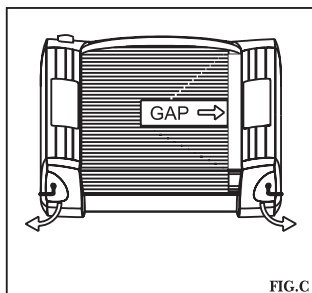

Inspecting Fasteners and Cable

Check that all fasteners are properly tightened and all cables are securely in place. To avoid damaging fasteners, do not over tighten.

Storage

Store your treadmill in a clean and dry environment. Ensure the master power switch is off and is unplugged from the electrical outlet.

Moving

The treadmill has been designed and equipped with wheels for easy mobility. Before moving, ensure the master power switch is in the "OFF" position and the power cord is unplugged from the electrical outlet. Lift the base frame of the treadmill and then roll the treadmill to the desired position.

Running Belt Lubrication

When you feel the noise of running belt is louder, please use silicone fluid spray on running belt. It is easy and quick. Before proceeding, ensure the treadmill power is off and unplugged. Fold up the treadmill to upright position. Loosen the running belt and then spray silicone on the inner side of running belt from both sides. Ensure spray entire running belt. Please see illustration. After spraying, please align the running belt and adjust the running belt tension.

